



MCL-3006 gauge kit

Thank you for purchasing the Dakota Digital MCL-3006 gauge kit for your Harley Davidson Touring bike. This kit is designed to be a direct, plug in replacement for all touring models from 2004 – 2013. Dakota Digital also offers a kit for older models, part number MCL-3000. The kit includes the following gauges and features:

IMPORTANT NOTE! This gauge has an odometer preset option that is only available for the first 100 miles (160km) of operation. See “preset odometer” for instructions.

Speed - programmable speed calibration, performance menu, two trip meters, odometer, count down service miles, security and check engine indicators

Tachometer – programmable tach, clock, gear position, cruise control indicator, ABS indicator, and high rpm recall

Oil Pressure – programmable warning point, uses stock sensor or Dakota Digital sensor for higher pressure


Oil Temperature – programmable warning point, complete with new sensor

Volts – programmable warning point

Fuel Level – low fuel warning, uses factory sensor, can be programmed for custom fuel sender

NOTE: The factory ambient air temp gauge is replaced by an oil temperature gauge.


All gauges have automatic night dimming controlled by a sensor in the tachometer.

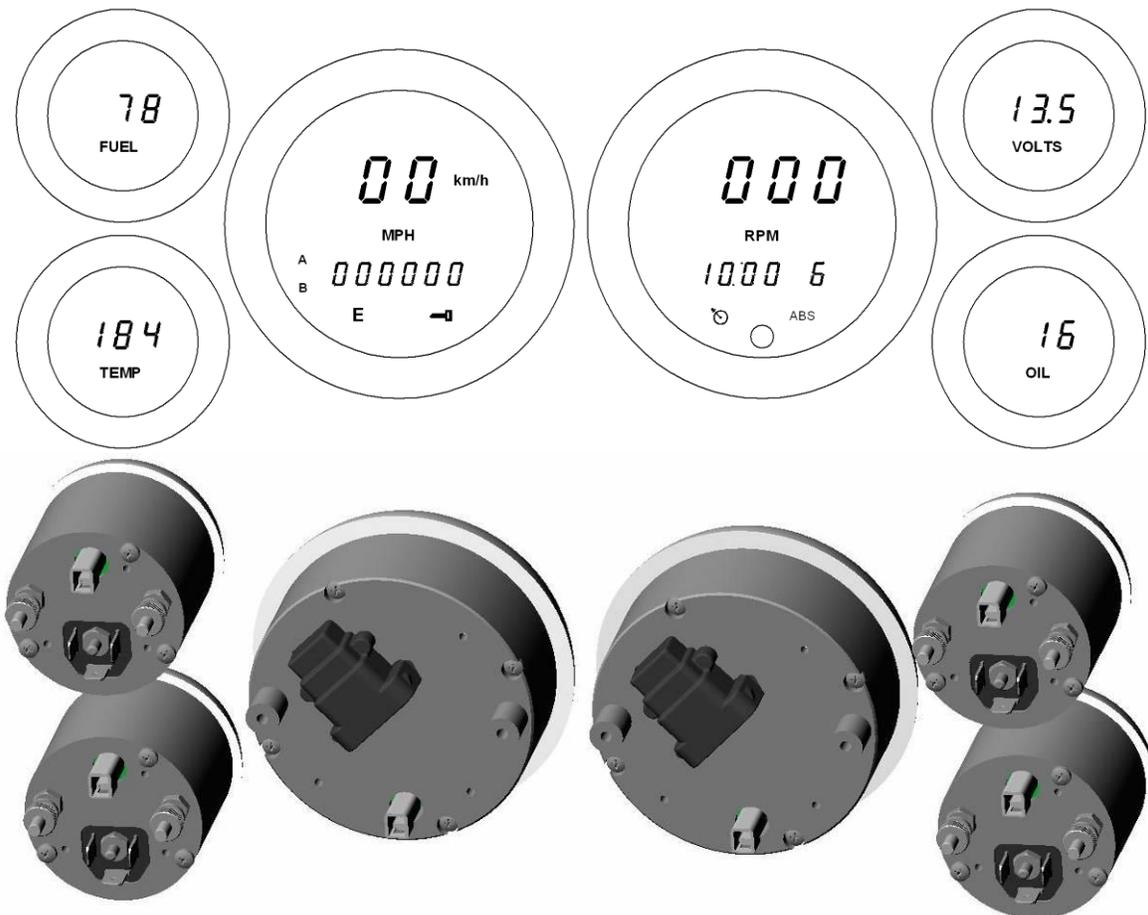


INSTALLATION

Please read and familiarize yourself with all of the components and this manual. The first step is to remove the seat and disconnect the negative side of the battery, as with any electronic install. Once the battery is disconnected you are ready to start.

Remove the outer fairing; this will vary from model to model, please follow the service manual to expose the wiring and gauges. Don't be alarmed by the amount of wires behind the fairing, this is a direct plug in kit and these detailed instructions will guide you through it.

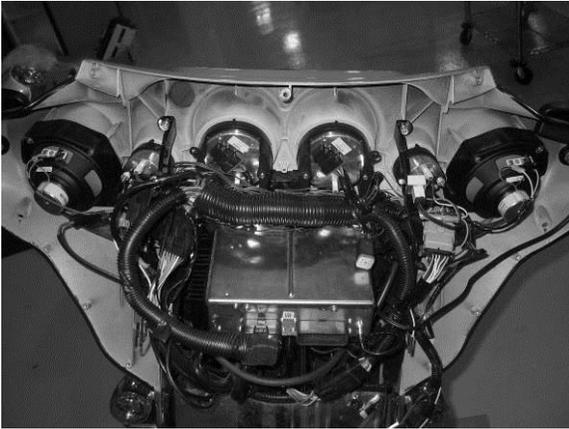

Street Glide with outer fairing removed

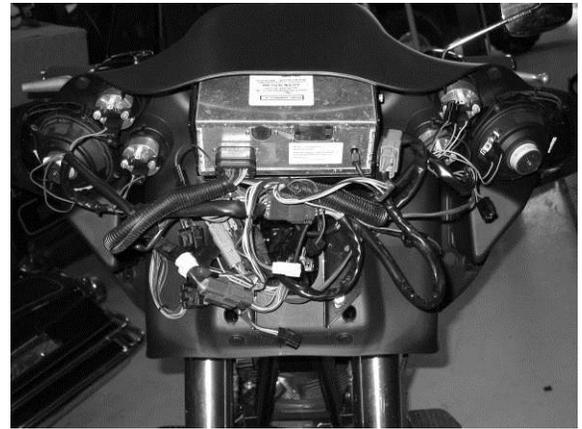


Road Glide with outer fairing removed


REMOVAL OF FACTORY GAUGES

ULTRA FLHT & FLHX (batwing fairings)

Unplug the speedometer and tachometer. Remove the screws securing the clamps that hold the gauges in place and pull them out through the fairing. Save the screws, gaskets, and clamps to be reused when you install your new Dakota Digital gauges.

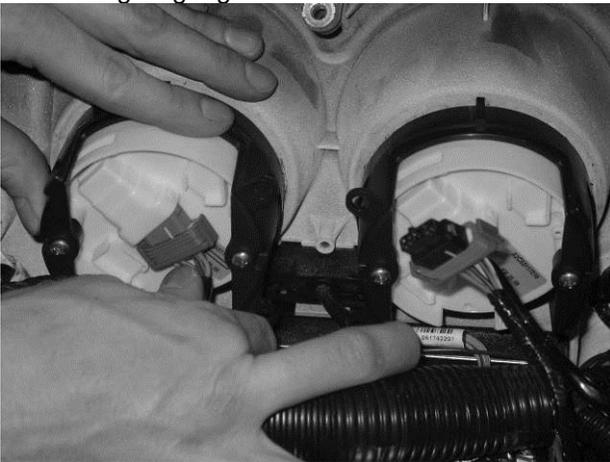

Unplug the factory speed and tach

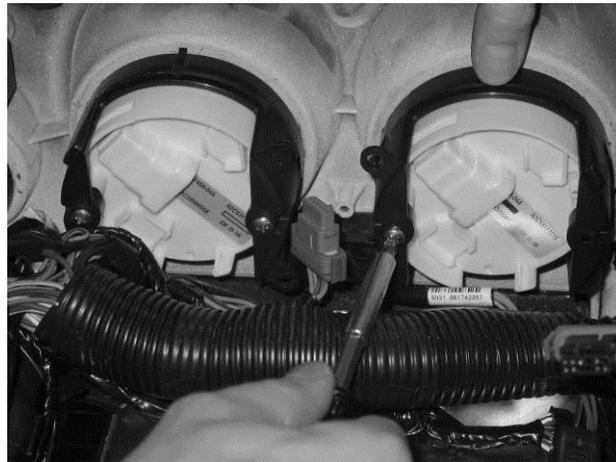

Unscrew the clamps and remove gauges

ROAD GLIDE FLTR

You will need to remove the speedometer and tachometer instrument bezel. To do this, remove two small screws on the left and right side of the bezel. Lift up on the back of the bezel and slide the tab that is under the ignition switch out from under the switch cover, see photos below of ignition switch cover removed to show detail. Unplug the gauge connections and unplug the indicator lights so the bezel can be completely removed for easier installation of the new gauges. Remove the clamps that hold the gauges to the bezel and remove the gauges and gaskets.



Picture of tab (switch cover removed)




Bezel removed



Gauges/Grommets removed

All of the small gauges, fuel, volts, oil, and air temp have two plugs. One is for illumination the other is for the gauge power, ground, and sensor. The illumination harness, two pins (orange and black wires), will not be reused and can hang freely inside the fairing, with the bulb removed, or can be secured to the other gauge wires to clean things up. The three pin connector will be used to connect all of the new Dakota Digital small round gauges. Unplug connectors at the back of the four small round gauges, then remove the two 5/16" nuts holding the clamps onto each small gauge and remove the gauges.


*New nuts for the small gauges are included in the hardware pack DO NOT reuse the stock nuts for the new gauges they are not the same thread.

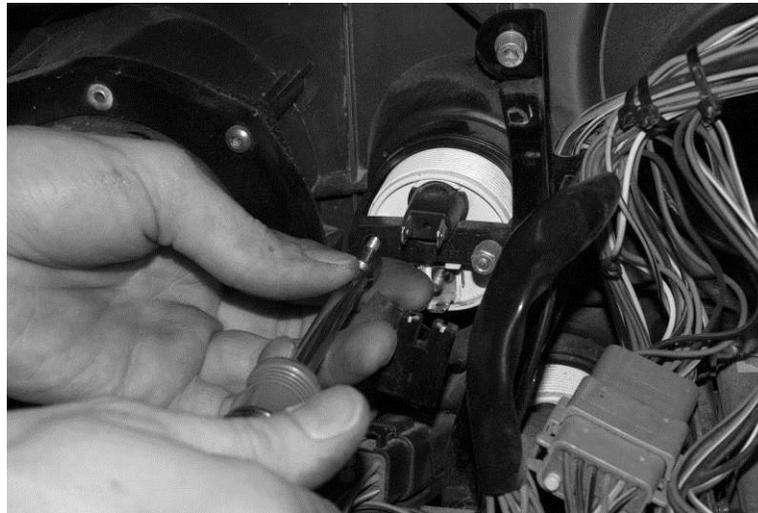

Remove the small gauges with 5/16" wrench or nut driver


IMPORTANT NOTE!

SAVE ALL CLAMPS, GASKETS, and SCREWS FROM THE STEPS ABOVE AS THEY WILL BE USED TO SECURE THE NEW DAKOTA DIGITAL GAUGES

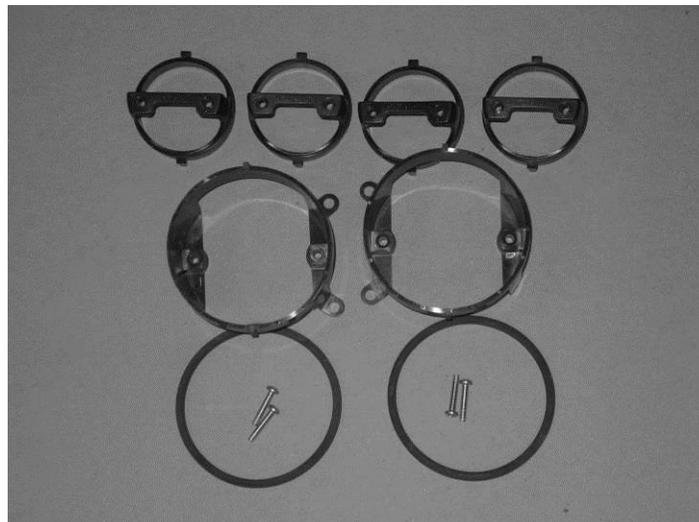

Save ALL Clamps, Screws, and Gaskets and reuse for install


Next you are ready to install the new gauges into the fairing. Install the gauges and secure using the original hardware that was removed: clamps, gaskets, and screws. Small gauges are secured using the original clamps along with the supplied nuts. The picture on the first page shows the proper location for each gauge. Be sure the alignment tab on the clamp lines up with the notches in the fairing. Some fairings may only have one notch, line up at least one tab on the clamp with the notch in the fairing, this will ensure the gauges are centered and aligned correctly.

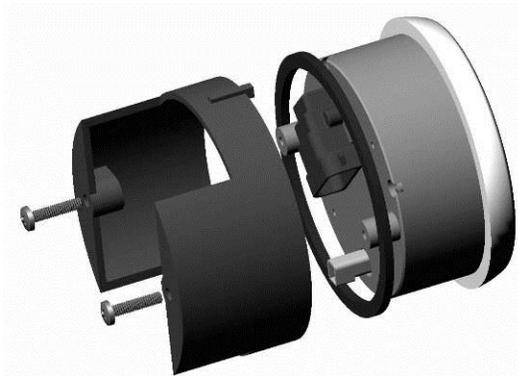

Speedometer and Tachometer



Oil PSI, Oil Temp, Voltmeter, and Fuel Level

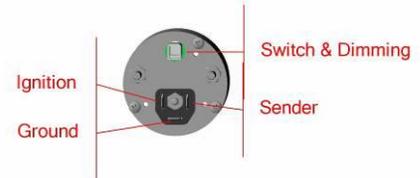


WIRING (plug in connections)


Now you are ready to make the gauge connections. Plug the original speed and tachometer connectors directly into the new gauges. Plug the original oil pressure, voltage, and fuel connectors directly into the new gauges. Because the digital fuel gauge is much more accurate than the original fuel gauge, any shifts in the grounding will be more noticeable. A 10% shift can be seen on the digital fuel gauge due to weak fairing ground connections that would not be noticeable with the original needle. It is recommended that a new ground wire be run from the fuel gauge to the fuel sender ground on the tank. Fuel ground harness 394164 is included for this purpose. Instructions and photos are shown after the oil temperature sensor installation.

The air temperature gauge is replaced with an oil temperature gauge and this connector will need to be changed, instructions on how to install and connect the sensor begin on the following page.

A two wire harness with six connectors is included. This will plug into the back of each gauge, these wires are the switch(green) and dim(blue) wires. Route one of these harnesses to the back of each gauge and plug it in. It does not matter which connector goes to each gauge.

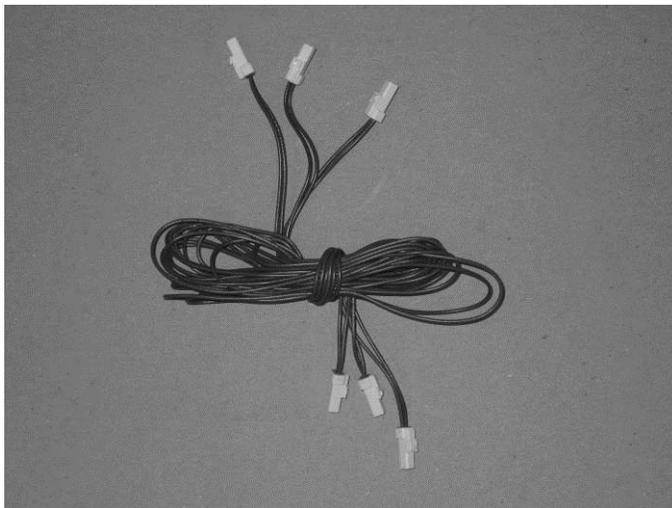

Switch and Dim wire harness

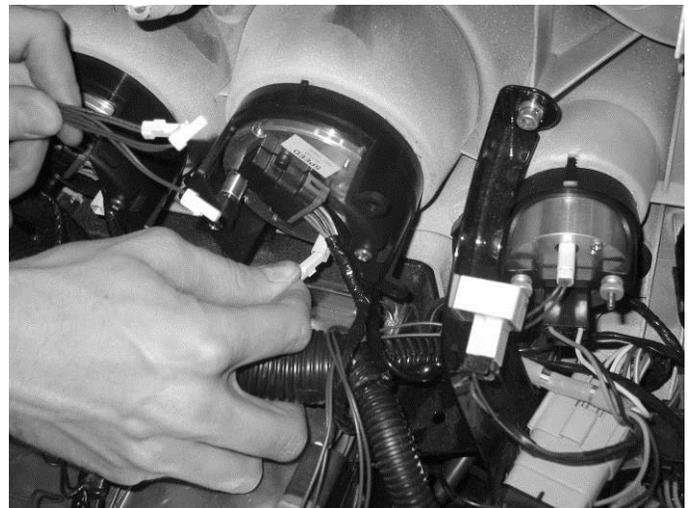

Connect one plug to the back of each gauge


OIL TEMPERATURE SENSOR

The only small gauge that requires an additional sender is the oil temp, since this is replacing the air temp gauge. The supplied oil temperature sensor replaces one of the oil pan plugs. You can do this at an oil change so you do not have to worry about losing oil, or be quick and you should only lose a small amount of oil. First locate the allen head plug on the front bottom side of the oil pan. The plug is on the right of the oil pan drain plug that is used to drain the engine oil for an oil change. It is a 3/8" NPT allen head plug that should be flush with the oil pan. See photo for the correct plug.

NOTE: Check oil level after install of this sensor, refill oil as needed



Oil Temp sensor and harness

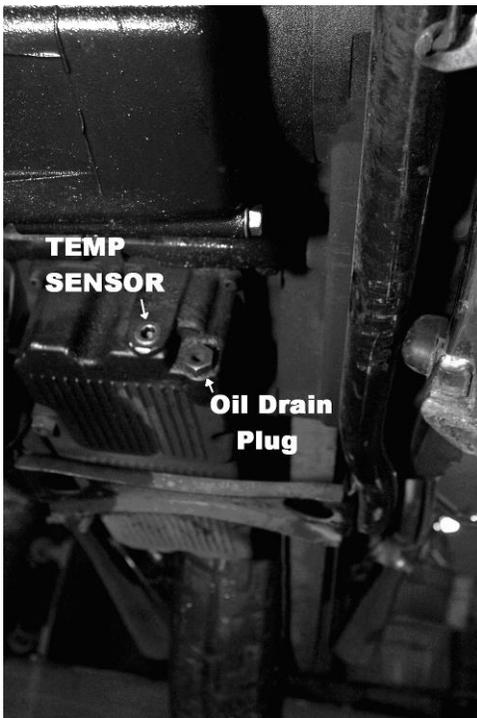

Bottom of oil pan



Remove 3/8" NPT allen plug

Wipe any road grime and oil from around the plug so the area is clean. Use a 5/16" allen wrench to remove the plug. Have the sensor ready to thread in so minimal oil is lost. Tighten the new oil temp sensor with a 3/4" wrench.



Thread sender into oil pan



Tighten temp sensor with a 3/4" wrench



Installed oil temp sensor and harness plug

Plug in the sealed two pin connector and route the wires over to the bottom right side frame rail. Begin running the wires back and up behind the transmission and starter area to the battery box, following the wiring harness that is in place. Use zip-ties to secure the wire harness to the other wires along the frame.

Once you have the wires up through the battery box area, it is recommended you remove the tank bolts to continue running the harness under the tank. Use a firm wire and some electrical tape to fish the wires up the backbone under the tank (filler rod/welding wire works well for a fish tape). Once clear of the tank, follow the factory wiring harness on the right side and route wires behind the fairing and over to the oil temp gauge. Make sure to replace and tighten the tank bolts when done. If you are going to be routing a new ground wire for the fuel gauge, it should be routed under the tank at the same time as the oil temperature harness to ease installation.




Remove rear tank bolt



Remove front tank bolts to loosen tank



Route wires under tank

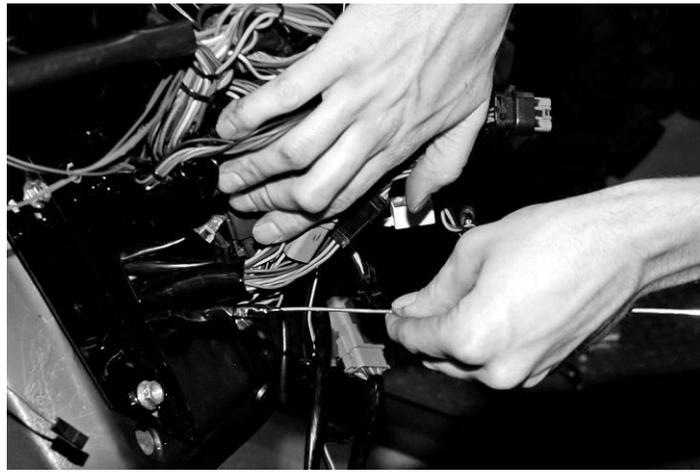

Pull the temp sensor wires through the fairing


Now you will have to de-pin a couple wires to connect the temp sensor wires to the factory plug to allow a factory style plug in connection to the gauge. The pins in the connector have a small locking tab on the back flat side of the terminal seen in the picture below. Use a small allen wrench/pick/or small screw driver to bend and release this tab. While pushing on the tab, pull the wire gently out from the back of the connector.

You will need to remove:

- Black pin 2 gauge ground (bottom center location in the housing)
- Blue w/ Violet pin 3 gauge signal (old air temp sensor, right location looking at back of housing)

Insert the RED wire into the previous location of the Blue w/ violet wire. Insert the other BLACK wire, wire with a short 3" pigtail, into the black wires previous location. Slide supplied piece of heat shrink over the pigtail and connect the spade connector on the black wire to the original gauge ground wire that was removed from the housing. This provides ground for the gauge and sensor. Heat up the heat shrink to protect the ground connection.


NOTE: See photos on the following page for more details

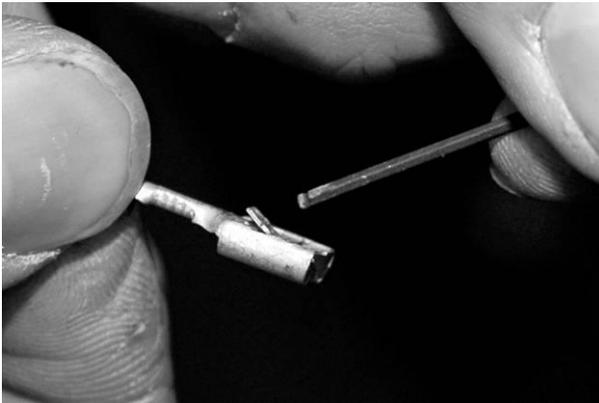

Locking tab on terminals




Using a small allen/pick release the locking tab

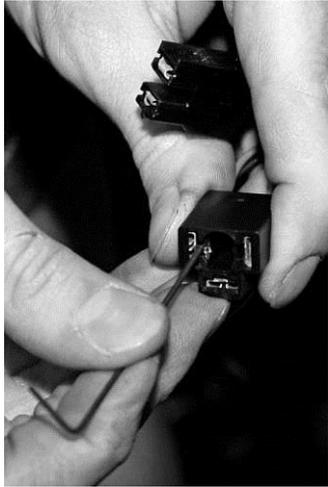

Push gently on the tab to release pin



Remove the pin from the connector

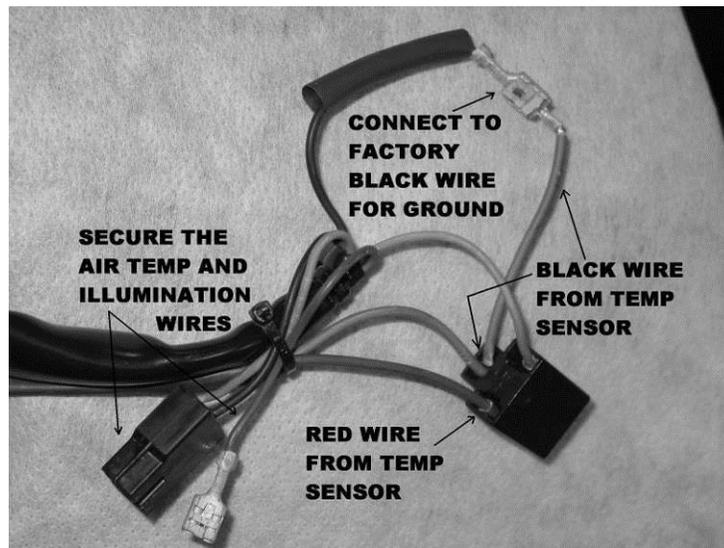

Oil Temp Sensor Plug Connections

FUEL GAUGE GROUND UPDATE

The replacement fuel gauge ground harness P/N 394164 is included in your kit. It has a long wire to go to the fuel sender and a short wire that is only used with 2004-2007 model year speedometers. The factory ground wire on the fuel gauge should be removed as shown with the oil temp gauge connections on the previous page and the supplied ground wire put in its place. The other end of the long ground wire should be routed under the tank with the oil temperature sensor harness and connect as close to the fuel pump connector as possible. Locate the three or four wire harness going to the fuel pump and fuel sender connector near the gas cap (shown below). The new fuel gauge ground should be attached to the black ground wires on this harness. Three wire harnesses will have one black wire and four wire harnesses will have two black wires, connect to the black ground wire in position C (3rd location). Soldering and covering with heat shrink is the preferred method for attaching the ground wire but a properly used butt connector will also work. Scotch lock style connectors are not recommended.



- Strip back the insulation on the black wire.
- Wrap the end of the new fuel gauge harness around the exposed wire.
- Solder the connection, making sure the solder flows into the wires.
- Wrap the splice with electrical tape to insulate it.

SPEEDOMETER GROUND UPDATE

****2004-2007 model year only.**

If you are using the miles to empty function on the speedometer with a 2004-2007 model year, then the speedometer ground (black wire) will also need to be cut and connected to the newly routed fuel gauge short ground wire. The original grounding on these models is not sufficient for the miles to empty function to operate correctly.



- Locate the 12 pin connector that plugs into the back of the speedometer.
- Cut the black or black/green wire a few inches down from the connector.
- Connect the speedometer connector side of the wire to the extra, short wire from the fuel gauge harness.

FUNCTION SWITCH

The factory speedometer push button switch is used as the main function switch. The function switch allows access to all of the mileage, RPM, and performance information. Pressing and releasing the function switch toggles through the different displays. Pressing and holding the switch for about two seconds will reset the current display. The display sequence for the speedometer is as follows:

SPEED MENU

000000	odometer mileage
A 000.0	trip meter mileage A
B 000.0	trip meter mileage B
S 0000	miles since last service (if programmed)
≡≡≡≡≡	speedometer will show km/h (or MPH if metric)
r 250.0 or r-RNGE	distance to empty (if turned on)

PERFORMANCE MENU (on speedometer when enabled)

H1 00	high speed recall
60 00.0	0-60 mph time (0- 00.0 0-100kph)
25 00.0	quarter mile time
25 00	quarter mile speed
t 000F	cylinder head temp from ECM (run switch must be on)

The 0-60 and ¼ mile timers are zeroed by pressing and holding the switch while that timer is displayed. The timer will not restart until the speed reaches zero and then you start driving again.

The function switch can also be used to change the tachometer display. Make sure the speedometer is displaying the odometer to avoid resetting any of the other settings before attempting to change the tachometer. Press and hold the switch for about four seconds to change the tach menu. Press and hold the switch for about six seconds to reset the high RPM recall while it is displayed. The tachometer only has two display modes as follows:

TACH MENU

CLOCK	>	12:00	12 hour clock
HI RPM	>	0000	high RPM recall

GAUGE SETUP AND CALIBRATION

The function switch, discussed above, is used to enter setup mode for all of the gauges. The first step in the setup procedure is to select which gauge you are going to select to change a setting. Each gauge will either show a number or a label. If the gauge is showing a label then that gauge will be selected to enter setup. All of the other gauges will exit setup and allow the selected gauge to be changed. To get into setup, press and hold the function switch while turning the key on. Press and release the switch to advance through the menus below; when on the desired option press and hold the switch to select setup for that particular gauge/function.

	speed	tach	oil psi	oil temp	fuel	volt
1 st	- 1 -	CL	- 1 -	- 1 -	- 1 -	- 1 -
2 nd	SPd	- 2 -	- 2 -	- 2 -	- 2 -	- 2 -
3 rd	- 3 -	tCH	- 3 -	- 3 -	- 3 -	- 3 -
4 th	- 4 -	- 4 -	PSI	- 4 -	- 4 -	- 4 -
5 th	- 5 -	- 5 -	- 5 -	F or C	- 5 -	- 5 -
6 th	- 6 -	- 6 -	- 6 -	- 6 -	FUL	- 6 -
7 th	- 7 -	- 7 -	- 7 -	- 7 -	- 7 -	ULt
8 th	- 8 -	- 8 -	- 8 -	- 8 -	- 8 -	- 8 -

FACTORY DEFAULT SETTINGS FOR SETUP MENUS

Below is a list of all of the factory gauge settings and what can be adjusted in the setup menus. You can calibrate and adjust gauges as often as you wish, however they should only need to be set once. Most gauges will function properly from the factory only desired warning points may need adjustment. **The fuel sender needs to be set per application as well.** The only gauge that may require setting after the initial install is the clock function on the tachometer so it is the first setup menu.

Speedometer		Tachometer		Pressure Gauge	
Unit	MPH	Clock Cal	0 (range -8 – 7)	Sender	60PSI (user selectable)
Service meter	OFF	Night Dimming	1 (darkest)	HI warn	51 PSI (range varies with sender)
Performance Menu	ON	Display Update	3 (fastest 1/8 sec.)	Lo warn	7 PSI (range 02-32 psi)
Fuel	OFF	RPM Warning	5500 (range 2200-9900)		
Volt Gauge		Oil Temp Gauge		Fuel Gauge	
Lo warn	11.1 V (range 9.6-12.6)	Sender	Set to deg F (user selectable scale)	Sender	10 ohm sender (user selectable)
Hi warn	15.4 V (range 13.9-16.9)	Hi warn	230 F (range 200-290F or 93-143C)	Lo Warn	10% (not adjustable)

SPEEDOMETER SETUP

Main Menu	Sub Menu	Description
<i>SPd</i>	<i>d IAG</i>	read diagnostic codes from engine or security modules
	<i>AdJUSt</i>	select adjust calibrate speed
	<i>un It</i>	select speed unit (MPH or km/h)
	<i>5 SEt</i>	miles to service setting
	<i>PERF</i>	enable/disable performance readings
	<i>FUEL</i>	setup fuel information
	<i>rRNGE</i>	setup miles to empty function
	<i>-odometer</i>	one-time odometer preset (only shown while odometer has less than 100 miles)

Press and hold the switch while turning the key on. Release the switch. The speedometer will show “- I-”. Press and release the switch so that “*SPd*” is displayed. Press and hold the switch for about three seconds until “ - ” is displayed. Release the switch. The MPH display will show “*5Et*” and the odometer display will show “*d IAG*”. Press and release the switch to move through the different speedometer setup menus. Press and hold the switch to select a menu option.

***d IAG* Diagnostics mode for checking/clearing trouble codes**

- Press and release the switch until “*d IAG*” is displayed, then press and hold the switch until “ - ” is displayed.
- Release the switch. The display will show “*ENG InE*”, “*SECLurE*”, “*AbS*”, or “*dOnE*”.
- Press and release the switch to change the selection, press and hold the switch until “ - ” is displayed to begin reading the stored codes for the particular system.
- Release the switch. The display will show the current codes, “*nOnE*”, or “*no rSP*”. Press and release the switch to move to the next stored code. After all codes are displayed the module part number will be scrolled across the screen. To clear codes, press and hold the switch when “end” is displayed. Consult a service manual for trouble code descriptions.

***AdJUSt* Speed Calibration**

The speedometer is calibrated by the engine computer, but the speedometer reading can be adjusted through the gauge. The adjustment is set a value from 0.75(75%) – 1.25(125%) with 1.00 being no change.

- Press and release the switch until “*AdJUSt*” is displayed, then press and hold the switch until “ - ” is displayed.
- Release the switch. The display will show “*Slow*” or “*FAStEr*”. Slow will make the speedometer read lower, faster will make the speedometer read higher. Press and release the switch to change the selection, press and hold the switch until “ - ” is displayed to continue on.
- Release the switch. The display will show “*CL 1.00*” or whatever the current calibration ratio is.
- Press and release the switch to change the adjustment ratio. Press and hold the switch until “ - ” is displayed to save the currently displayed ratio.

***un It* MPH/km/h Selection**

- Press and release the switch until “*un It*” is displayed, then press and hold the switch until “ - ” is displayed.
- Release the switch. The display will switch to “*un It*” and light up the current speed unit (MPH or km/h).
- Press and release the switch until the desired setting is displayed.
- Press and hold the switch until “ - ” is displayed to the setting.

***5 SEt* Miles to Next Service setup**

The service mileage is a countdown mile meter. The service mile display can be disabled or can be set to count down from 500 – 7500 miles. If the service mile is enabled and it gets to 0 miles, it will display “*5 -dUE*” each time the key is turned on. If the push button switch is pressed and held while “*5 - - - -*” is displayed, the service miles will be reset.

- Press and release the switch until “*5 SEt*” is displayed, then press and hold the switch until “ - ” is displayed.
- Release the switch. The current setting will be displayed. (“*oFF*” or a mileage from 500 – 7500 in increments of 500.)
- Press and release the switch until the desired setting is displayed.
- Press and hold the switch until “ - ” is displayed to save the setting.

***PERF* Performance Menu setup**

The performance readings can be turned on or off. When they are turned off the odometer will only toggle through the mileage readings.

- Press and release the switch until “*PERF*” is displayed, then press and hold the switch until “ - ” is displayed.
- Release the switch. The current setting will be displayed (“*oN*” or “*oFF*”).
- Press and release the switch until the desired setting is displayed.
- Press and hold the switch until “ - ” is displayed to save the setting.

(Speedometer Setup Continued)

FUEL Fuel sender selection **DEFAULT OFF**

This setting should be set to "OFF", this may be used for future accessories. The options are to allow the fuel information to be introduced to the data bus. This menu is not really important but is here in case future accessories require it. You should not harm anything if the settings are incorrect, but OFF is the default setting at this point.

- Press and release the switch until "FUEL" is displayed, then press and hold the switch until " - " is displayed.
- Release the switch. The current setting will be displayed ("OFF" or "ON").
- Press and release the switch until the desired setting is displayed.
- Press and hold the switch until " - " is displayed to save the setting.
- If "ON" is selected, then "DONE", "TEST", "RESET", or "ADJUST" options will be displayed. "TEST" shows the current fuel reading. "RESET" and "ADJUST" change the fuel data sent on the bus and will not normally need to be changed.
- Press and release the switch until "DONE" is displayed. Press and hold the switch until " - " is displayed to exit.

RANGE Distance to Empty setup

The range reading will initially show the word "RANGE" until a tank of gas has been driven to allow the gauge to complete its setup based on your driving. Begin with a full tank of gas and do not refill it until it gets below ¼ tank of gas. This can be done on multiple trips as long as no fuel is added before it gets low enough. After the initial setup, the display will show "r" followed by the calculated distance to empty. This will count down, making adjustments as necessary, until the range is 35 miles (56km) or less and then it will show "r L0". The gauge will continue to make adjustments to match your driving habits with each fill up. After the initial setup you are not required to wait for the fuel to get below ¼ tank before refilling.

- Press and release the switch until "RANGE" is displayed, then press and hold the switch until " - " is displayed.
- The display will show "OFF" or "ON". Press and release the switch to change to the desired setting.
- Press and hold the switch until " - " is displayed to select the setting.
- "OFF" turns the range display off.
- Turning the function ON will access the following menus
 - DONE (exits the setup)
 - RESET (resets the gauge to beginning of the initial range learning)
 - SENDER (used to change or reset the fuel gauge readings)
 - - 10 (set to 2004 – 2007 model with Dakota Digital fuel gauge - 10 or 10 setting)
 - d 10 (set to 2004 – 2007 model with Dakota Digital fuel gauge d 10 setting)
 - d33 (set to 2008 – 2013 model with Dakota Digital fuel gauge d33 or 33 setting)
 - HD4 (set to 2004 – 2007 factory fuel gauge)
 - HD8 (set to 2008 – 2013 factory fuel gauge)
 - d-C (set to a custom fuel curve with Dakota Digital fuel gauge)
 - SET 00 (set new empty reading, "DONE" indicates it was stored, "ERROR" indicates the signal is out of range)
 - SET 99 (set new full reading)
 - C5t (set to a custom fuel curve with factory fuel gauge)
 - SET 00 (set new empty reading, "DONE" indicates it was stored, "ERROR" indicates the signal is out of range)
 - SET 99 (set new full reading)
- Press and release the switch to select the desired fuel setup menu, press and hold it until " - " is displayed, and then release the switch to view or go on.
- A press and hold will save the setting or exit back to the menu.
- "DONE" is the first menu displayed, a press and hold will exit fuel set up at this point.
- "RESET" will begin the initial range learning again. You must begin with a full tank of gas and then ride it down to less than ¼ tank. This can be done in multiple trips as long as the tank is not filled in between. The range display will show "RANGE" until this is completed and then begin showing the distance to empty.
- "SENDER" is used to select the type of fuel sender and gauge being used to allow the speedometer to read the fuel level accurately.

(Speedometer Setup Continued)

ODO Odometer preset

The odometer can be preset by the customer within the first 100 miles. Once the odometer has more than 100 miles the menu option will no longer be displayed. Make sure you have correctly selected the units to be either MPH or km/h first. The odometer will be set in the selected units. Once you have preset the miles you cannot change it again. **WARNING!!: This only allows setting odometer to the nearest mile. Do not use tenths! For example a mileage of 65432.1 should be set to "065432" using this method. If the tenths digit is used, the odometer will read 10 times too high.**

- Press and release the switch until "ODO" is displayed, then press and hold the switch until " - " is displayed.
- The current miles will be displayed with the left most digit flashing.
- Press and release the switch to increment the digit. Press and hold the switch to move to the next digit to the right.
- Continue until the right most digit has been set. Press and hold the switch and the speed display will show "no".
- Press and hold the switch while "no" is displayed to go back and continue changing the odometer display. Turn the key off to cancel any changes.
- Press and release the switch to change to speed display to "SPEED". Press and hold the switch while "SPEED" is displayed to save the current odometer reading.

TACHOMETER SETUP

Main Menu	Sub Menu	Description
CL		set clock time
ELH	n IGH	set night dimming level
	uPDR	set RPM update rate for digital readout
	uJRN	set RPM shift warning point
	GEAR	transmission gear programming

Press and hold the switch while turning the key on. Release the switch. Press and release the switch until "ELH" is displayed, then press and hold switch until " - " is displayed. The RPM display will show "SPEED" and the lower display will show "n IGH". Press and release the switch to move through the different menus, press and hold the switch to select a menu option.

Note: The tachometer calibration may require you to hold the switch while starting the bike, but only if you are going to adjust/set the GEAR programming since you will have to ride the bike. Some ignition systems may disrupt power to other circuits, when cranking, causing the gauge to reset, this is why you must hold the switch while starting if you are setting up the GEAR display. All other gauge functions and gauges can be set without running the engine.

CL Clock Setup

The time is displayed on the smaller display below the RPM, and is the first setup menu since it is the only setting that requires change once the initial calibrations are complete.

- To set the clock, press and hold the switch while turning the key on. Release the switch.
- The RPM display should show "CL", press and hold switch until " - " is displayed.
- Release the switch. The lower display will show the current hours.
- Press and release the switch to change the hours, press and hold the switch to change to the minutes.
- Release the switch. The lower display will show the current minutes.
- Press and release the switch to change the minutes, press and hold the switch to change to the time adjust calibration.
- Release the switch. The lower display will show "CAL" and a number from -8 to 7. This allows the clock to be adjusted +/- 7 seconds per day.
- Press and release the switch to change the CAL value, press and hold the switch to save this and exit the clock setup.

n IGH Night Dimming

Your display system has a dimming feature that dims the display intensity. Normally the system is at full brightness for daytime viewing. The tachometer has a light sensor that will provide a signal to the other gauges to reduce the brightness at night. The level of darkness before the gauges dim can be adjusted in the tachometer setup.

- Press and release the switch until "n IGH" is displayed, then press and hold the switch until " - " is displayed.
- Release the switch. The update setting will be displayed. (1=late(darkest), 2=mid, 3=early(lightest), OFF).
- Press and release the switch until the desired setting is displayed.
- Press and hold the switch until " - " is displayed to save the setting.

uPDR Display update setup

The display update will select how quickly the tachometer reading will respond.

- Press and release the switch until "uPDR" is displayed, then press and hold the switch until " - " is displayed.
- Release the switch. The update setting will be displayed. (1=slow, 2=mid, 3=fast).
- Press and release the switch until the desired setting is displayed.
- Press and hold the switch until " - " is displayed to save the setting.

(Tachometer Setup Continued)

Ⓐ RPM warning setup

- Press and release the switch until “Ⓐ” is displayed, then press and hold the switch until “-” is displayed.
- Release the switch. The current warning point will be displayed.
- Press and release the switch until the desired setting is displayed.
- Press and hold the switch until “-” is displayed to save the setting.

Ⓓ Gear indicator setup

This gauge has a single digit display for gear position. The gauge can learn the gear ratios based on speed and RPM so no sensors are needed, just what you’ve already connected. It will work with 4, 5, 6, or 7 speed transmissions. The factory preset option will preset the indicator to work with a stock 5 or 6 speed drive train. With a stock 6 speed there will be a slight delay the first time you shift to sixth gear as the system verifies the gear. You can also program each gear position for aftermarket transmissions or if you’ve changed tire size or sprocket size. To program the gear positions, begin at a section of road where you can gradually shift through all of the gears. Press and hold the switch while turning the key on and starting the engine. Once the engine is running, release the switch.

- Press and release the switch until “Ⓔ” is displayed. Press and hold the switch until “-” is displayed.
- Press and release the switch until “Ⓓ” is displayed, press and hold the switch until “-” is displayed.
- The display will show “OFF”, “PRESET”, or “LEARN”. “OFF” will disable the indicator. “PRESET” will set the indicator for an original factory transmission. “LEARN” allows it to work with virtually any transmission option.
- To program each gear individually, press and release the switch until “LEARN” is displayed, then press and hold the switch.
- The message will show “LO Ⓔ” if the engine RPM is below 1500, or “LO SPD” if the vehicle speed is below 5 MPH.
- Begin driving in 1st gear. The display should show “Ⓓ 1” and the “1” should be flashing. Drive at a steady speed until the “1” goes steady and then changes to a flashing “2”, it should only take about 20 seconds if the speed and RPMs are steady.
 - *Optional: If the gear does not stop flashing you can manually override and jump to the next gear by pressing and releasing the switch to store the gear position quicker.*
- Shift to 2nd gear and drive at a steady speed.
- Wait until the “2” goes steady and then changes to a flashing “3”. Shift to 3rd gear.
 - *Optional: If the gears do not stop flashing you can manually override and jump to the next gear by pressing and releasing the switch to store the gear position quicker.*
- Repeat this through each gear. When you are done, come to a complete stop or press and hold the switch until the display shows “done” and then release it.
- Press and release the switch to restart the gauges in normal operation, verify the gear position by riding through each gear and seeing if positions agree.

OIL PRESSURE SETUP

The oil pressure gauge can be set for various stock Harley pressure senders. There is a display update setting for how fast the numbers will change, as well as a user settable low and high pressure warning points. When a warning condition is reached, the gauge will flash the reading as a warning indicator. The stock sender for 1999 and up should be the 60 psi sender. For higher pressure and more accurate pressure readings one of two Dakota Digital senders may be used: 0-75 psi SEN-1032, or 0-150 psi SEN-1031.

- To enter setup, press and hold the switch while turning the key on.
- Release the switch. The gauge will show “- 1-”.
- Press and release the switch until “P5 1” is displayed, then press and hold the switch until “5nd” is displayed.
- Press and release the switch until the correct sender type is displayed. “40” for ’96-’98 stock sender, “60” for ’99-up stock sender, “75” for Dakota Digital 75 psi, “150” for Dakota Digital 150 psi.
- Press and hold the switch until “LO” is displayed, then release the switch.
- Press and release the switch until the desired low pressure warning point is displayed.
- Press and hold the switch until “H 1” is displayed, then release the switch.
- Press and release the switch until the desired high pressure warning point is displayed.
- Press and hold the switch until “SPd” is displayed, then release the switch.
- Press and release the switch to change the update rate between fast “F5t” and slow “SL0”.
- Press and hold until “- - -” is displayed to save the settings. Turn the key off.

OIL TEMPERATURE SETUP

The oil temp gauge has a user selectable high temperature warning point that can be set so the gauge will flash the reading when the temp is met or exceeded. The gauge will only read correctly with the supplied sender.

- To enter setup, press and hold the switch while turning the key on.
- Release the switch. The gauge will show “- 1-”.
- Press and release the switch until “F” or “C” is displayed, then press and hold the switch until “5nd” is displayed.
- Press and release the switch to change between Fahrenheit “F” and Celsius “C”.
- Press and hold the switch until “H 1” is displayed, then release the switch.
- Press and release the switch until the desired high temperature warning point is displayed.
- Press and hold until “- - -” is displayed to save the settings. Turn the key off.

FUEL SETUP

The fuel gauge can be set to read two stock Harley sensor curves, see setup procedure below for correct sender selection. There is also a non-adjustable warning feature that will flash the gauge at any reading below 10% as a low fuel warning indicator.

- To enter setup, press and hold the switch while turning the key on.
- Release the switch. The gauge will show “- I-”.
- Press and release the switch until “FUL” is displayed, then press and hold the switch until “Snd” is displayed.
- Press and release the switch until the correct sender type is displayed. “d 10” for 73-10, “d33” for 240-33, “- 10” for 73-10 and MCL-3006 speedometer with software code MS1A or older, “CUS” for custom or “CAL” for custom sender programming. **The stock fuel sender (2004-2007) should use the “d 10” setting for correct readings or “d33” for 2008-2013 models.** If “CAL” is not selected, press and hold until “- - -” is displayed. Turn the key off.
- If “CUS” is selected, and a custom fuel curve has not yet been programmed, the gauge will immediately enter the “CAL” routine.
- If “CAL” is selected, the fuel sender curve can be programmed into the gauge. Begin with an empty tank. The gauge will be showing “- 00” and switch to displaying the measured resistance. Press and release the switch to save the empty reading.
- The display will show “- 33” and then switch to displaying the measured resistance. Add enough fuel to fill the tank to 1/3. Press and release the switch to save the 1/3 reading.
- The display will show “- 55” and then switch to displaying the measured resistance. Add more fuel to fill the tank to 2/3. Press and release the switch to save the 2/3 reading.
- The display will show “- 99” and then switch to displaying the measured resistance. Add more fuel to fill the tank full. Press and release the switch to save the full reading.
- Press and hold until “don” is displayed to save the settings. The gauge will then return to normal operation.

VOLT SETUP

The volt gauge has user settable low and high voltage warning points that will make the gauge flash as a warning indicator when either of the conditions are met or exceeded.

- To enter setup, press and hold the switch while turning the key on.
- Release the switch. The gauge will show “- I-”.
- Press and release the switch until “u l” is displayed, then press and hold the switch until “Lo” is displayed.
- Press and release the switch until the desired low voltage warning is displayed.
- Press and hold the switch until “H I” is displayed, then release the switch.
- Press and release the switch until the desired high voltage warning point is displayed.
- Press and hold until “- - -” is displayed to save the settings. Turn the key off.

Speedometer Troubleshooting guide.

Problem	Possible cause	Solution
Gauge will not light up	Orange wire does not have power. Black wire is not getting a good ground.	Inspect the harness and repair or connect to a location that has power. Inspect the harness and repair or connect to a different ground location.
	Gauge is damaged.	Return gauge for repair. (see instructions)
Gauge lights up, but speed will only show zero.	No data from ECM. Speed sensor not grounded properly.	Check engine trouble codes. Move ground to different location, preferable close to the speedometer ground.
	Sensor is not sending a speed signal.	Check for a damaged or malfunctioning speed sensor.
Speed reading is erratic or jumps around.	Speed sensor wire is loose or broken. Poor ground connection. Ignition Interference	Check all wire connections and inspect wire for breaks. Check ground connection on speedometer and sensor. Check for tachometer wires routed with VSS signal wires. Check for VSS signal wires routed near ignition coils Check for poor ignition system ground Use suppression spark plug wires
Speed reading is incorrect.	Gauge is not calibrated correctly.	Gauge must be calibrated (see instructions).
Gauge will not dim.	Blue wire (2-pin harness) is not connected correctly.	Check wiring connections. Blue wire should have 12 volts when tachometer is dim.
Gauge remains dim at all times.	Blue wire (2-wire harness) is getting power all all of the time.	Check wiring connections. Blue wire should have 0 volts when tachometer is bright.
Security indicator does not work.	Loose or incorrect connection to indicator wire.	Check that the appropriate indicator wire has about 0 volts when the indicator should be off and about 12 volts when the indicator should be on.
Engine indicator does not work.	No data from ECM.	Check engine trouble codes.
ECM performance tune or reprogramming fails.	Stock service tools look for all stock gauges.	Unplug MCL-3006 and reprogram ECM. MCL-3006 can be plugged back in as soon as reprogramming is complete.

Tachometer Troubleshooting guide.

Problem	Possible cause	Solution
Gauge will not light up	Orange wire does not have power. Black wire is not getting a good ground.	Inspect the harness and repair or connect to a location that has power. Inspect the harness and repair or connect to a different ground location.
	Gauge is damaged.	Return gauge for repair. (see instructions)
Gauge lights up, but tach will only show zero.	No data from ECM.	Check engine trouble codes.
Tach reading is erratic or jumps around.	Tach signal wire is loose or broken. Poor ground connection.	Check all wire connections and inspect wire for breaks. Check ground connection on tachometer, engine, and ignition system.
	Update rate is too fast.	Reset display update speed slower.
Gear indicator is always “?”	Gears not programmed.	Program gear indicator in setup. (see instructions)
Gauge will not dim.	Night dimming is turned off or too low.	Change “night” setting in setup. (see instructions).
Gauge remains dim at all times.	Night dimming is turn too high. Light sensor at bottom of gauge is covered.	Change “night” setting in setup. (see instructions). Make sure the lower part of the lens is not covered.
Gauge will not enter setup.	Green wire (2-wire harness) is not connected correctly.	Check wiring connections. Green wire should have 12 volts when the switch is pressed.
Cruise Engage indicator does not work.	Loose or incorrect connection to indicator wire.	Check that the appropriate indicator wire has about 12 volts when the indicator should be off and about 0 volts when the indicator should be on.
ECM performance tune or reprogramming fails.	Stock service tools look for all stock gauges.	Unplug MCL-3006 and reprogram ECM. MCL-3006 can be plugged back in as soon as reprogramming is complete.

Small gauge Troubleshooting guide.

Problem	Possible cause	Solution
Gauge will not light up	Orange wire does not have power. Black wire is not getting a good ground.	Inspect the harness and repair or connect to a location that has power. Inspect the harness and repair or connect to a different ground location.
	Gauge is damaged.	Return gauge for repair. (see instructions)
Gauge reading is erratic or jumps around.	Gauge signal wire is loose or broken. Poor ground connection.	Check all wire connections and inspect wire for breaks. Check ground connection on gauge, engine, and sensor.
Gauge reading is incorrect.	Gauge is set up for wrong sensor type. Poor gauge grounding.	Change sensor setting in setup. (see instructions). Repair or replace ground wire.
Gauge will not dim.	Blue wire (2-pin harness) is not connected correctly.	Check wiring connections. Blue wire should have 12 volts when tachometer is dim.
Gauge remains dim at all times.	Blue wire (2-wire harness) is getting power all all of the time.	Check wiring connections. Blue wire should have 0 volts when tachometer is bright.
Gauge will not enter setup.	Green wire (2-wire harness) is not connected correctly.	Check wiring connections. Green wire should have 12 volts when the switch is pressed.

SERVICE AND REPAIR

DAKOTA DIGITAL offers complete service and repair of its product line. In addition, technical consultation is available to help you work through any questions or problems you may be having installing one of our products. Please read through the Troubleshooting Guide. There, you will find the solution to most problems. **Should you ever need to send the unit back for repairs, please call our technical support line, (605) 332-6513, to request a Return Merchandise Authorization number.** Package the product in a good quality box along with plenty of packing material. Ship the product by UPS or insured Parcel Post. Be sure to include the RMA number on the package, and include a complete description of the problem with RMA number, your full name and address (street address preferred), and a telephone number where you can be reached during the day. Any returns for warranty work must include a copy of the dated sales receipt from your place of purchase. Send no money. We will bill you after repair.

Dakota Digital 24 Month Warranty

DAKOTA DIGITAL warrants to the ORIGINAL PURCHASER of this product that should it, under normal use and condition, be proven defective in material or workmanship within 24 MONTHS FROM THE DATE OF PURCHASE, such defect(s) will be repaired or replaced at Dakota Digital's option.

This warranty does not cover nor extend to damage to the vehicle's systems, and does not cover removal or reinstallation of the product. This Warranty does not apply to any product or part thereof which in the opinion of the Company has been damaged through alteration, improper installation, mishandling, misuse, neglect, or accident.

This Warranty is in lieu of all other expressed warranties or liabilities. Any implied warranties, including any implied warranty of merchantability, shall be limited to the duration of this written warranty. Any action for breach of any warranty hereunder, including any implied warranty of merchantability, must be brought within a period of 24 months from date of original purchase. No person or representative is authorized to assume, for Dakota Digital, any liability other than expressed herein in connection with the sale of this product.

⚠️WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
 Sioux Falls, SD 57107
www.dakotadigital.com
dakotasupport@dakotadigital.com

Phone (605) 332-6513
 Fax (605) 339-4106

© Copyright 2016 - Dakota Digital