




## Series II ODYR/SLX-05 VOLTMETER rev. A

### Wiring:

- GND - Connect to a main ground location.
- PWR - Connect to fused switched 12VDC power. (An accessory terminal will work for this.)
- DIM - Night Dimming: connect to the head light switch.
- SND - Voltage measuring point, usually jumper over to the PWR terminal.

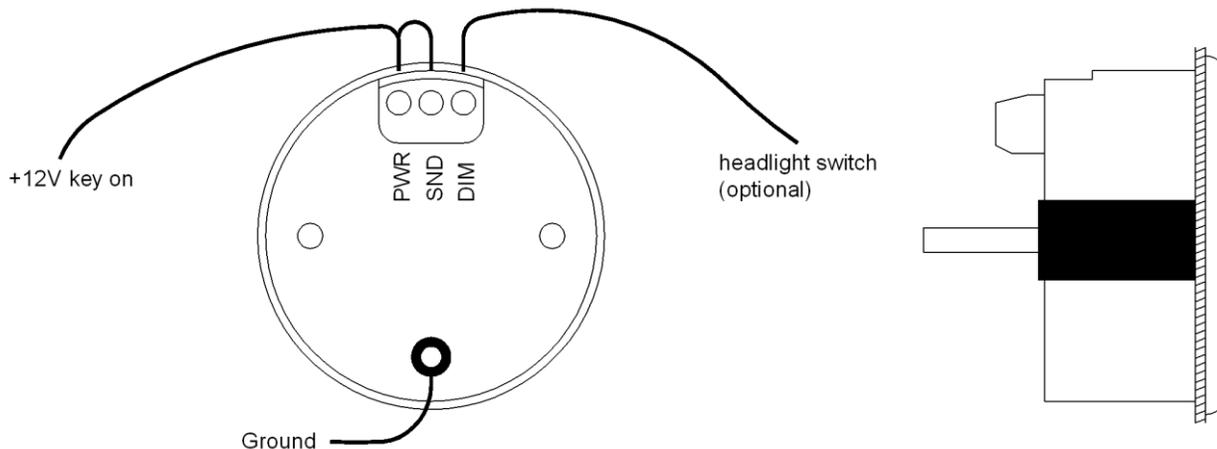

### Mounting:

The Series II gauge requires a round hole 2-1/16" in diameter. It should be inserted into the opening from the front and the U-clamp will be installed from the back. Tighten the two nuts on the U-clamp so that the gauge is secure. Gauge depth to the back of the case is 1". Gauge depth including the mounting studs is 1-7/8".

### Factory settings:

Lo warning point: 11.1VDC  
Hi warning point: 15.4VDC

- The voltage gauge will operate in the voltage range of 8.0 – 17.0VDC and read correct between the voltage range of 1.0 - 18.0VDC volts.
- It has a user adjustable lower and upper warning level, which can be set to indicate low voltage and overcharging conditions.

The SND terminal is the voltage sensing input. To read the vehicle system voltage, connect this to the PWR terminal. To read the voltage at a second battery or other remote location, connect a wire from the SND terminal to the voltage to be monitored.

### Setting the warning limits:

The SND terminal is used to enter and change the warning settings. You will need a wire connected to the SND terminal that can be powered separate from the gauge. The headlights should be off or the DIM terminal unhooked so that it does not interfere with the setup.

1. To enter the set mode, turn the key on with the SND wire not powered. The gauge will display "SEt".
2. Power the SND wire. The gauge will display "HI". (If you wait too long the gauge will exit the setup routine and you will need to repeat step # 1).
3. Release the SND wire. The gauge will display a number between 13.9 and 16.9.
4. Each time you momentarily power the SND wire the number will increase by one.
5. When the desired high warning value is displayed, keep the SND wire powered for about 2 seconds. The gauge will display "LO".
6. Release the SND wire. The gauge will display a number between 9.7 and 12.6.
7. Each time you momentarily power the SND wire the number will increase by one.
8. When the desired low warning value is displayed, keep the SND wire powered for about 2 seconds. The gauge will display "--".
9. Turn the key off.

### Troubleshooting guide.

Problem	Possible cause	Solution
Gauge will not light up	PWR terminal does not have power. GND terminal does not have a good ground. Gauge is damaged.	Connect to a location that has power. Connect to a different ground location. Return gauge for service. (see instructions)
Gauge lights up, but does not read correctly.	Loose connection on SND terminal. Poor ground connection. Gauge sender setup is incorrect. Voltage or wiring problem in the vehicle wiring harness.	Reconnect wire. Move ground to different location See "Setting sender setup" in the manual. Check wiring harness for loose or damaged wires.
Gauge lights up, but displays "Er0".	Gauge is damaged.	Gauge must be returned for service. (see instructions)
Gauge lights up, but displays "---".	SND terminal is shorted to ground. Sender is damaged.	Check wire for damaged insulation. Replace if necessary. Replace sender.
Gauge lights up, but displays "EEE".	Sender is not connected to gauge. Wire between gauge and sender is broken. Sender is not grounding properly. Sender is damaged. Gauge is damaged.	Connect SND terminal on gauge to sender terminal. Test and replace wire. Sender grounds through it's mounting plate. Make sure the mounting plate has a good ground Replace sender. Return gauge for service. (see instructions)
Gauge lights up, but displays "Er3".	Gauge is not calibrated correctly.	Gauge must be recalibrated. (contact factory)
Gauge lights up, but displays "Er5".	Warning limits are not set properly.	See "Setting the warning limits" in the manual.
Gauge flashes constantly.	Warning limits are not set properly. Vehicle is over or under charging. SND terminal is not connected.	Reset warning limits. Check alternator and battery. Make sure SND terminal is connected properly.
Gauge will not dim.	DIM terminal is not connected correctly.	Check wiring connections.
Gauge remains dim at all times.	DIM terminal is getting power all of the time. Battery is very low. Gauge is damaged.	Connect DIM wire to location that only has power when the headlights are on. Recharge or replace vehicle battery. Return gauge for service. (see instructions)

## SERVICE AND REPAIR

DAKOTA DIGITAL offers complete service and repair of its product line. In addition, technical consultation is available to help you work through any questions or problems you may be having installing one of our units.

Should you ever need to send the unit back for repairs, please package the product in a good quality box along with plenty of packing material. Ship the product by UPS or insured Parcel Post. Be sure to include a complete description of the problem, your full name and address (street address preferred), and a telephone number where you can be reached during the day. An authorization number for products being returned for repair is not needed. Any returns for warranty work must include a copy of the dated invoice or bill of sale.

### Technical specifications

Minimum operating voltage	-	7VDC
Maximum operating voltage	-	17VDC
(operating at or near maximum voltage for an extended time can damage unit)		
Gauge Resolution	-	0.1VDC
Low Warning Range	-	9.6 – 12.6VDC
High Warning Range	-	13.9 – 16.9VDC
Gauge accuracy	-	±0.1VDC
Typical current draw (@ 13.8V)	-	0.1 A

## SERVICE AND REPAIR

DAKOTA DIGITAL offers complete service and repair of its product line. In addition, technical consultation is available to help you work through any questions or problems you may be having installing one of our products. Please read through the Troubleshooting Guide. There, you will find the solution to most problems.

**Should you ever need to send the unit back for repairs, please call our technical support line, (605) 332-6513, to request a Return Merchandise Authorization number.** Package the product in a good quality box along with plenty of packing material. Ship the product by UPS or insured Parcel Post. Be sure to include the RMA number on the package, and include a complete description of the problem with RMA number, your full name and address (street address preferred), and a telephone number where you can be reached during the day. Any returns for warranty work must include a copy of the dated sales receipt from your place of purchase. Send no money. We will bill you after repair.

### Dakota Digital 24 Month Warranty

DAKOTA DIGITAL warrants to the ORIGINAL PURCHASER of this product that should it, under normal use and condition, be proven defective in material or workmanship within 24 MONTHS FROM THE DATE OF PURCHASE, such defect(s) will be repaired or replaced at Dakota Digital's option.

This warranty does not cover nor extend to damage to the vehicle's systems, and does not cover removal or reinstallation of the product. This Warranty does not apply to any product or part thereof which in the opinion of the Company has been damaged through alteration, improper installation, mishandling, misuse, neglect, or accident.

This Warranty is in lieu of all other expressed warranties or liabilities. Any implied warranties, including any implied warranty of merchantability, shall be limited to the duration of this written warranty. Any action for breach of any warranty hereunder, including any implied warranty of merchantability, must be brought within a period of 24 months from date of original purchase. No person or representative is authorized to assume, for Dakota Digital, any liability other than expressed herein in connection with the sale of this product.

**⚠ WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



4510 W. 61st St. North  
Sioux Falls, SD 57107  
www.dakotadigital.com  
dakotasupport@dakotadigital.com

Phone (605) 332-6513  
Fax (605) 339-4106

Copyright 2011 - Dakota Digital, Inc.