



XMT-6-9K Replacement transmitter for CMD-9000

INSTRUCTIONS FOR TESTING AND PROGRAMMING TRANSMITTERS

All of the transmitters to be programmed into the system should be available. This sequence will erase any previously programmed transmitters. If a transmitter is lost or stolen, go through the programming sequence with the remaining transmitters and the lost one will be erased. The programming light is located next to the four programming switches.

Placing receiver into programming/testing mode.

1. Unplug the main harness connector from the receiver unit.
2. Turn Switch #4 on.
3. Plug in the main harness connector so that the unit has power. The red programming light should come on and remain on.

Testing the transmitters.

1. Press button 5. The programming light should flash as long as the button is held.
2. Press button 1. The programming light will flash if the transmitter is currently programmed in. This will also resynchronize the transmitter with the decoder. The number of flashes will indicate the transmitter number.

Programming the transmitters.

1. Turn Switch #4 off. The programming light should go off. (If no transmitter buttons are pressed within 6 seconds the system will exit the programming routine.)
2. Press and release button number 3. The programming light should come on.
3. Press and release button number 3 again. The programming light should flash and then go out. It will flash once for the first transmitter, twice for the second, etc.
4. The transmitter is now stored. If you have more transmitters, take the next transmitter and go back to step 2.
5. Press button 4. This will exit the programming mode and restart the system.

BATTERY REPLACEMENT

Should the transmitter function become weak or erratic, the battery in the key chain transmitter may be weak. An indication of a weak battery is that the green indicator may have a dim glow to it when any button is pressed. The battery is replaced in the following manner:

1. Remove the small screw on the back of the transmitter case.
2. Carefully separate the two case halves.
3. Remove the battery, noting the (+) and (-) position.
4. Replace the battery with a new 12 volt type GP23A battery which is available at most electronic stores (Radio Shack, battery stores, etc.).
5. Carefully replace the top cover and refasten the screw

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com

dakotasupport@dakotadigital.com Copyright 2011 - Dakota Digital, Inc.

Phone (605) 332-6513
Fax (605) 339-4106