


Installing SEN-09-7 Vacuum/Boost Sensor on 1984-'87 Buick Grand National

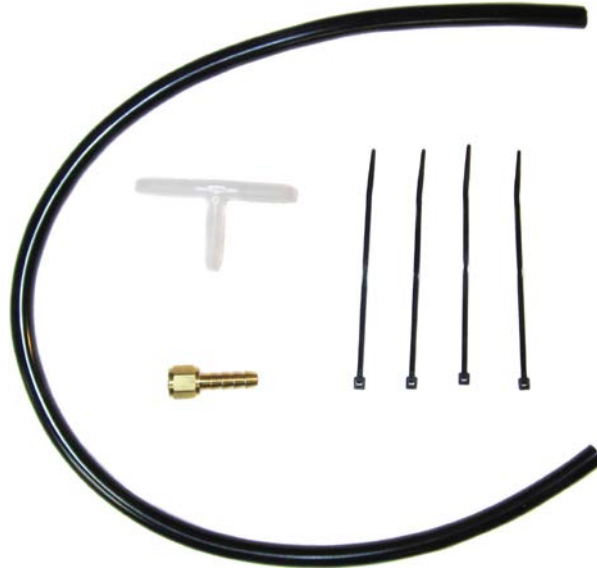

1. Splice the provided plastic tee into the vacuum supply for the fuel PSI regulator and push the provided hose onto the tee. Use zip ties to secure the hoses to the tee.



2. Thread the provided barbed adapter onto the PSI sender.



3. Route the open end of the hose and cut to length for the desired sender location. Push the hose onto the barbed adapter. Use a zip tie to secure the hoses to the adapter. Refer to the main manual for connections and operation.



⚠️WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com
dakotasupport@dakotadigital.com

Phone (605) 332-6513
Fax (605) 339-4106

© Copyright 2017 - Dakota Digital