




55-56 Chevy car kit installation

This sheet contains additional information not found in your installation manual.

Your kit should include the display panel, control box, lens, 5 #8 machine screws and 10 nylon spacers. The lens should be installed first. Secure the lens into the chrome bezel using silicone RTV or hot glue and allow to dry. Next install the display panel. The nylon spacers are to be placed between the display panel and the chrome bezel. This is to allow proper spacing between the display panel and the lens. Due to variations in the chrome bezels you may need to use one or two spacers between the display panel and the chrome bezel.

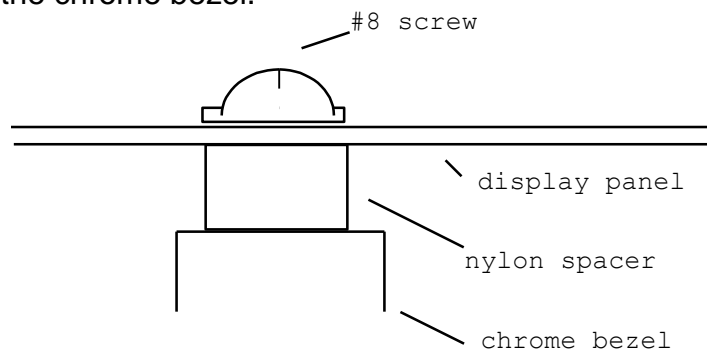

**IMPORTANT!
THIS BAG CONTAINS
SCREWS, SPACERS,
AND INSTRUCTIONS
FOR USE IN
INSTALLING YOUR
SYSTEM.**

⚠WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com

dakotasupport@dakotadigital.com Copyright 2011 - Dakota Digital, Inc.

Phone (605) 332-6513
Fax (605) 339-4106