


1970-72 Buick Skylark
Dakota Digital Gauge Installation

This sheet covers the installation of the Dakota Digital gauge kit into your 70-72 Buick Skylark/GS.

Remove the cluster from the vehicle.



Remove the original gauges from the bezel and set aside.

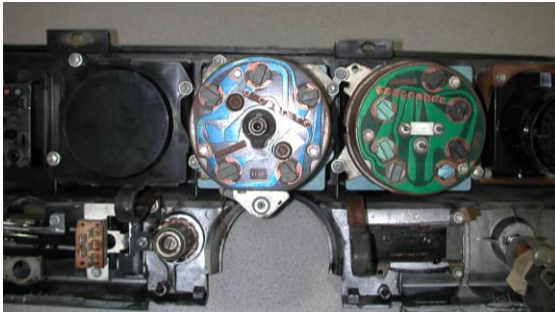

Install included #8-32 X 1/2" hex standoffs on original gauge mounting studs, hand tightening as far as possible. Up to 1/16" gap between standoff and hex of the original stud is acceptable. Be careful not to over tighten causing damage to the plastic risers.

Place Dakota Digital gauge assembly on to the back of the original bezel. Using the supplied 8-32 X 1/4" screws attach the gauges to the bezel. Only tighten far enough so the lens is touching the bezel. Due to heat and age the plastic risers may have warped and may need a little pressure to line up with the screw holes.

Again, do not use too much pressure as it may cause damage to the bezel.

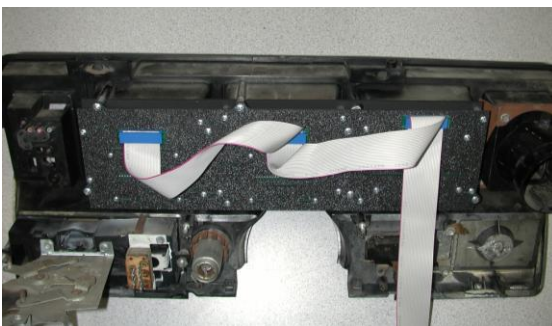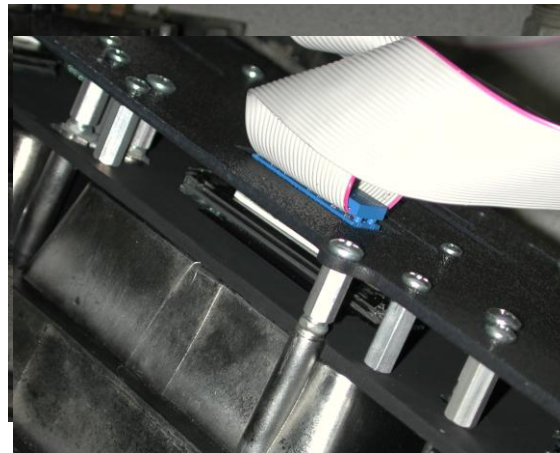

See the main instruction manual for the remainder of the installation.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com

dakotasupport@dakotadigital.com Copyright 2011 - Dakota Digital, Inc.

Phone (605) 332-6513
Fax (605) 339-4106