

VFD3-730-CUT Installation Guide

Fits 1973-77 Oldsmobile Cutlass



1. Remove the cluster from the vehicle. Remove the factory gauge cans from the original bezels. Keep the original screws as they will be reused.




2. The speedometer gauge cluster will go onto the original speedometer bezel and the tachometer gauge cluster will go onto the original fuel gauge bezel.

3. Use the original screws to hold the Dakota Digital gauges to the original bezels.

NOTE: Some years used a screw with an attached larger washer (approximate 1/2" OD), these may contact the subpanel and/or circuit board and should not be used in the areas where they do. Purchase some additional #8 self threading screws or grind down the washers.



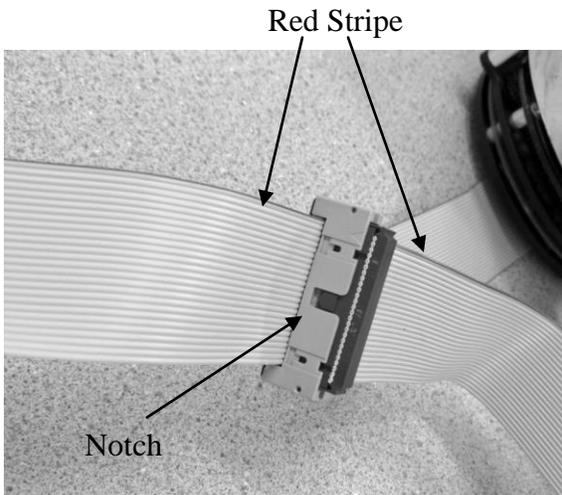

4. Install the gauges into the dash and connect the ribbon cables together. There is a notch on the blue cable end that corresponds with a slot in the inline connector.

NOTE: The red stripe on the ribbon cables should be on the same side.

5. See the main instruction manual for the remainder of the installation.



⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com
dakotasupport@dakotadigital.com

Phone (605) 332-6513
Fax (605) 339-4106

Copyright 2011 - Dakota Digital, Inc.