



**INSTALLATION INSTRUCTIONS**  
**LAT-NR101**  
LED Tail Lights for 1967-68 RS Camaro.

MAN# 650195

**Kit includes:**



**Installation:**

67-68 RS Camaro



1. Remove the original bulb sockets from the housing.




2. Remove the tail light housing hardware so the housing can be taken out of the car. Remove the housings from the vehicle carefully so the body gaskets are not damaged.



3. Next remove the lens to gain access to the housing. There are six screws that hold the housing halves together, remove the screws and separate the halves carefully.



4. Now is a good time to clean the lens and housing. If lenses are in bad shape a new set is recommended.
5. Remove the mounting plate from the bottom of the assembly; it is attached with two 3/8" 6-32 machine screws.

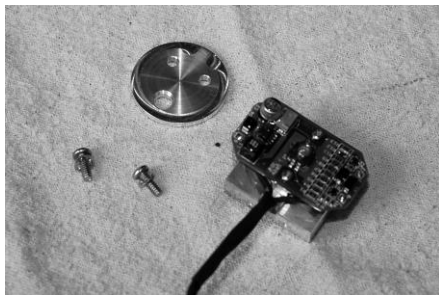

6. Pass the wires through the housing where the original bulb and socket were.




7. Feed the wires through the larger hole in the mounting plate and guide it to the bottom of the housing. The flat side of the mounting plate should be on the outside of the housing and the side with the slight raised center should go into the tail light housing. This will properly align the mount in the original housing.



- Now hold the LED assembly centered over the hole where the original bulb was and align the mounting plate from the bottom with the slot in the housing. Position the LED assembly so the screw holes line up.



- Screw the mounting plate into the mount using the two previously removed 3/8" #6 screws. This will secure the LED assembly into the housing. You are now ready for re-assembly.

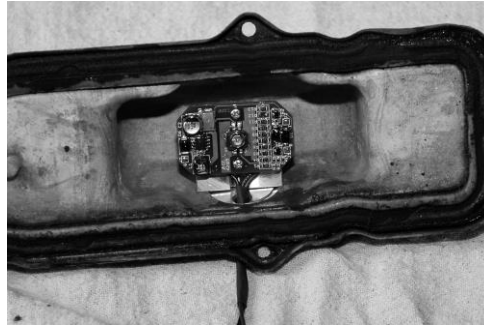

- Repeat the steps above for the second light.



- Install the lens and reassemble the housing, insuring all gaskets are intact and in place. Install the housing back into the vehicle. You are now ready to wire the LED assembly into the vehicle harness.




- Cut off the existing light socket as it will not be used. Do not strip the wires. Trim the wires from LED assembly to appropriate length once mounted, making sure wires are routed cleanly and securely.

- Use the supplied moisture resistant pigtail connectors\* to attach the wires from the new LED assembly to the existing vehicle harness. Insert appropriate wire from vehicle harness and mating LED assembly wire into a connector and crimp following instructions below.

\*For the best connection, soldering is recommended. But to simplify installation, the supplied connectors will provide a fast weather resistant connection.

**The correct crimp method for the supplied connectors is:**

- 1.) Insert **UNSTRIPPED** wires into the connector and ensure they are all the way in by observing the clear bottom of the connector to see the wires are touching the end.
- 2.) Use pliers to push the blue cap down flush with the edge of the clear body, completing the connection. The connection will only be correct if pressed firmly down with pliers.

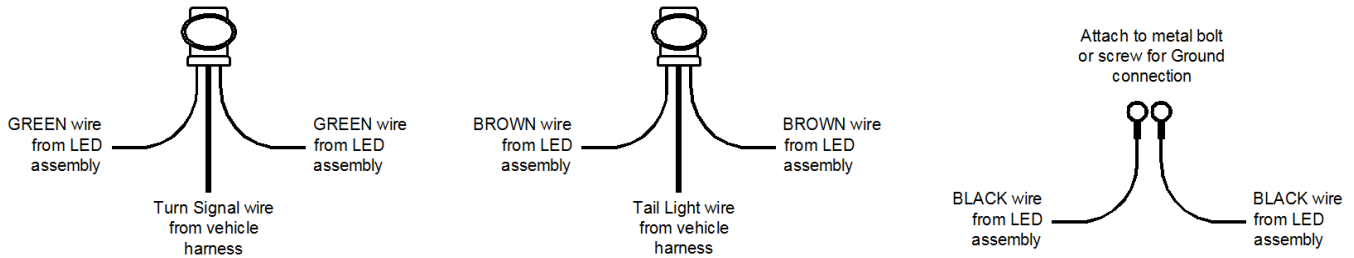

	LED wires	Vehicle harness
Taillight	Brown	Brown
Driver's Turn	Green	Green
Passenger's Turn	Green	Yellow
Ground	Black	Chassis or body

14. Repeat for the other side.

15. Test the tail lights, brake lights, and turn signals. If the turn signals do not flash you will need to upgrade your flasher. If you are replacing only the rear turn signals you should be able to use a heavy duty electronic flasher from your local parts store. If you are replacing both front and rear or do not have front bulbs you will need a no-load flasher, Dakota Digital part number LAT-NLF.

**Service and Repair**

DAKOTA DIGITAL offers complete service and repair of its product line. In addition, technical consultation is available to help you work through any questions or problems you may be having installing one of our products. Please read through the Troubleshooting Guide. There, you will find the solution to most problems. **Should you ever need to send the unit back for repairs, please call our technical support line, (605) 332-6513, to request a Return Merchandise Authorization number.** Package the product in a good quality box along with plenty of packing material. Ship the product by UPS or insured Parcel Post. Be sure to include the RMA number on the package, and include a complete description of the problem with RMA number, your full name and address (street address preferred), and a telephone number where you can be reached during the day. Any returns for warranty work must include a copy of the dated sales receipt from your place of purchase. Send no money. We will bill you after repair.

**Dakota Digital Limited Lifetime Warranty**

DAKOTA DIGITAL warrants to the ORIGINAL PURCHASER of this product that should it, under normal use and condition, be proven defective in material or workmanship for the lifetime of the original vehicle it was installed in, such defect(s) will be repaired or replaced at Dakota Digital's option. This warranty does not cover nor extend to damage to the vehicle's systems, and does not cover removal or reinstallation of the product. This Warranty does not apply to any product or part thereof which in the opinion of the Company has been damaged through alteration, improper installation, mishandling, misuse, neglect, or accident. This Warranty is in lieu of all other expressed warranties or liabilities. Any implied warranties, including any implied warranty of merchantability, shall be limited to the duration of this written warranty. No person or representative is authorized to assume, for Dakota Digital, any liability other than expressed herein in connection with the sale of this product.

**⚠️ WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



4510 W. 61st St. North  
 Sioux Falls, SD 57107  
[www.dakotadigital.com](http://www.dakotadigital.com)  
[dakotasupport@dakotadigital.com](mailto:dakotasupport@dakotadigital.com) Phone (605) 332-6513  
 Fax (605) 339-4106  
 Copyright 2011 - Dakota Digital, Inc.