



1978-82 Chevy Corvette
Dakota Digital Gauge Installation

This sheet covers the installation of the Dakota Digital gauge kit into your 78-82 Corvette Dash Cluster.


- Remove the cluster from the vehicle
- Remove the stock speedometer and tachometer, light bulb holders and wiring grid from the back
- Mark the cluster for trimming as shown in photos below

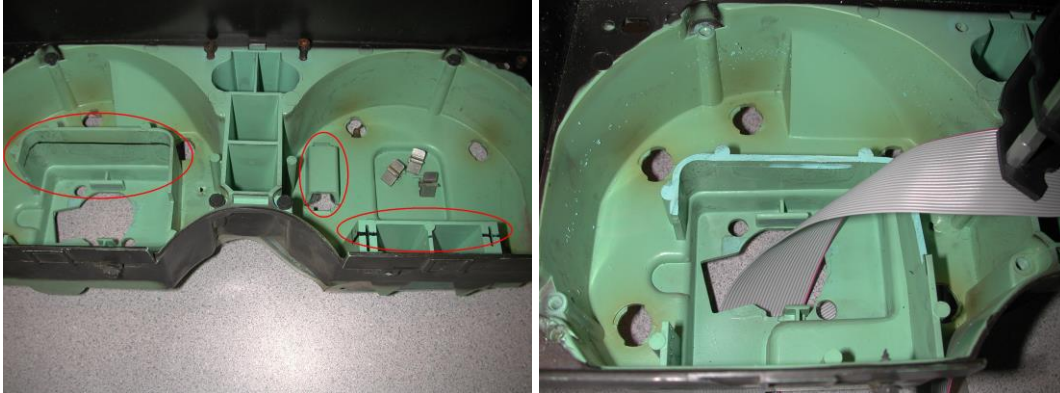

- Remove approximately 1/2" from the top part of the plastic divider on the speedometer side. Pass ribbon cable through center hole.

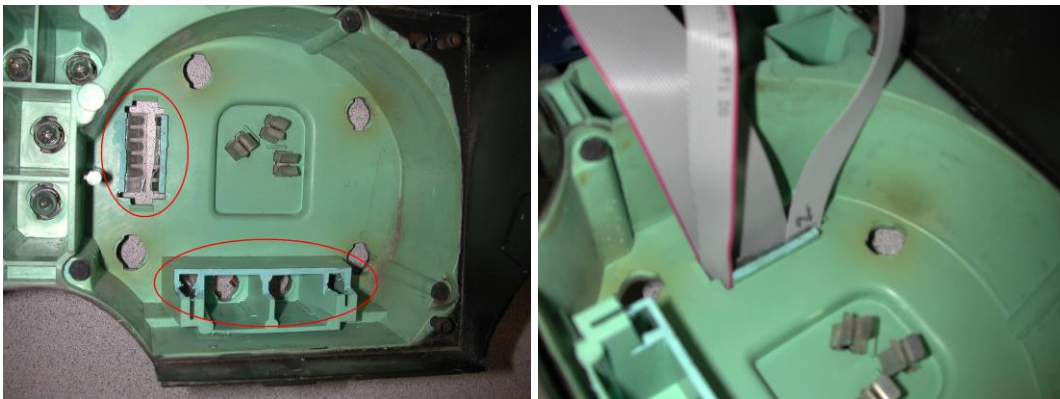



- Remove bump on left side of tachometer opening where factory wiring harness plug pushes into.
- Also remove a 1/2" deep by 3/8" wide section of light tubes on the bottom of tachometer opening.
- Route 3 ribbon cables through the hole where original harness plug attached.

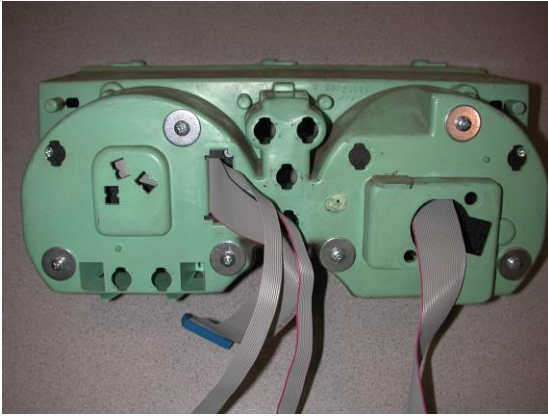

- Push gauge assemblies into openings and attach with screw and fender washer through light bulb holes from the back of the cluster
- Reattach front trim plate and clear lens

Console Gauge Assembly:

- Remove factory gauges from console.
- Attach Dakota Digital console gauge assembly to console using provided hardware. Retain original clear lens and black gauge divider.

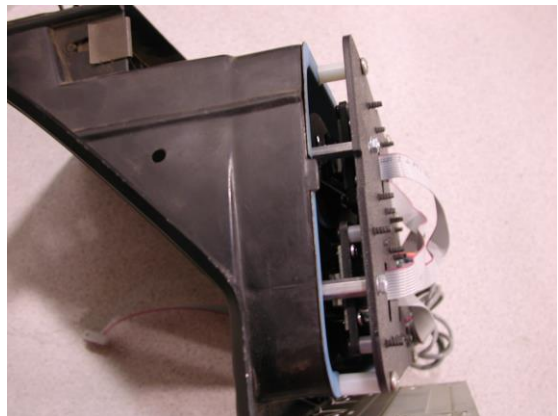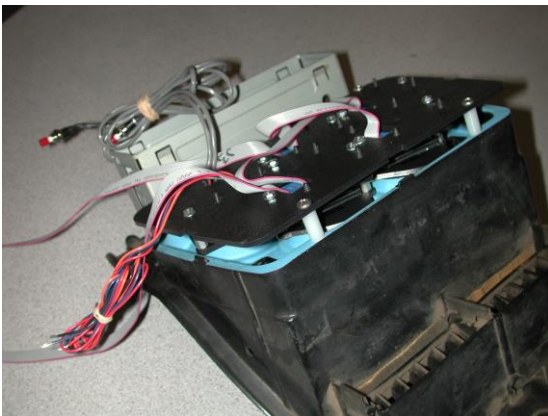

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



4510 W. 61st St. North
Sioux Falls, SD 57107
www.dakotadigital.com
dakotasupport@dakotadigital.com

Phone (605) 332-6513
Fax (605) 339-4106

Copyright 2011 - Dakota Digital, Inc.