

## VHX-68C-CVL

Dakota Digital VHX Instrument Installation  
For 1968 Chevelle/El Camino Systems

Your new VHX-68C-CVL kit includes:

VHX Display



Universal Sensor Pack




Switch Assembly



Block Off Lens



Control Box

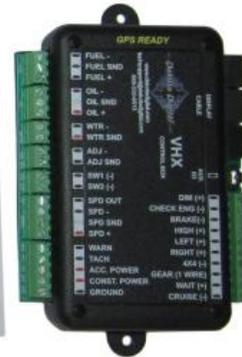

36" CAT5 Cable  
24" CAT5 Cable




## Installation

1. Remove the stock instrument cluster/dash bezel from the car.




2. Remove the five screws holding the gauges to the bezel as well as the two screws holding ground straps on the back of the system. Save the screws as they will be reused to secure the new VHX system in the steps below.

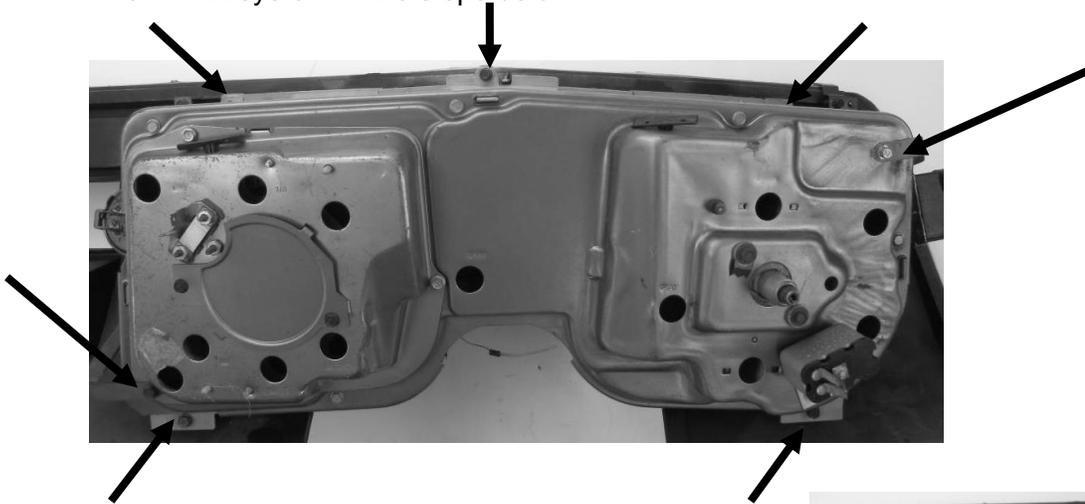


3. Remove the stock gauges from the stock lens spacer. The lens spacer is going to be reused to secure the new VHX gauges to the dash/bezel. Remove seven screws holding the gauges to the spacer. Save the screws, they will be reused to attach the new VHX system.



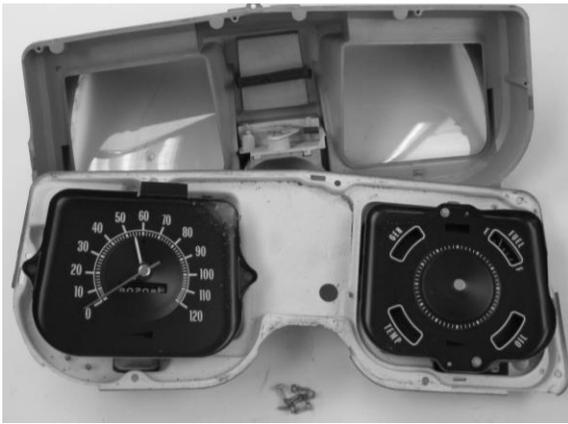

4. Remove the stock lenses from the lens spacer by removing three screws from the front of each lens. The stock lenses are removed since the new VHX kit features a hard coated clear lens. Now is a good time to clean the stock lens spacer as it is reused to secure and space the new VHX system.

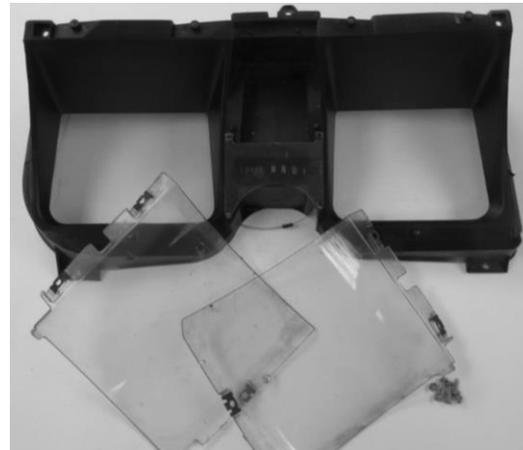


5. This step is optional for automatic transmission bezels only. If you purchased a separate GSS-universal gear kit from Dakota Digital, the gear position can be displayed in the VHX message centers, therefore the stock gear position indicator can be removed.

The stock gear position indicator will slide out from its location. Remove the protective film from the supplied block off and align the notches with the bumps in the stock housing. Use silicone or hot glue to attach the block off.




\*\*\* Allow the glue to dry before continuing with the installation.

6. Remove the protective tape from the clear lenses and install the VHX system onto the stock lens spacer removed previously. Secure the system to the spacer reusing the seven screws removed in step 3.

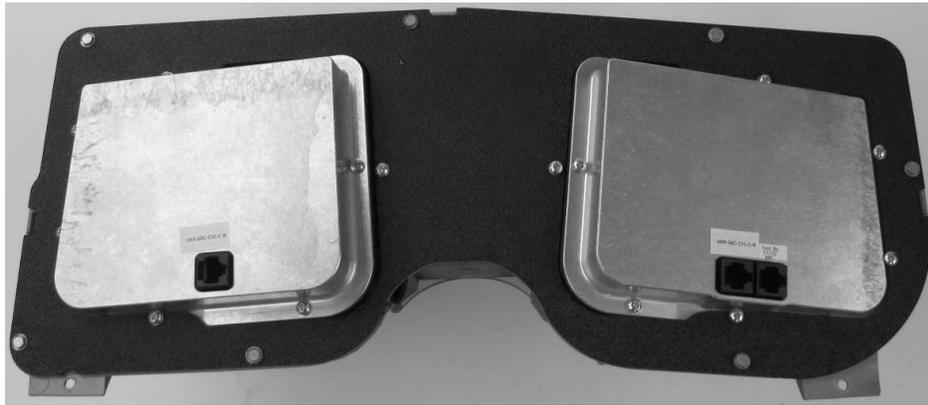

7. Secure the VHX system onto the bezel with the five screws that were removed in step 2.

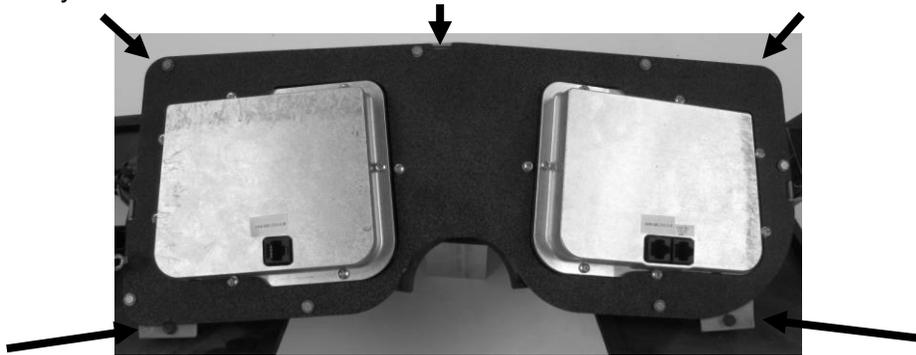

8. Connect the short CAT5 cable between the two gauge housings, then connect the long cable to the system so it can be routed and connected to the control box as the system is re-installed.



9. Re-install the cluster into the car and refer to the main manual for wiring instructions to complete the VHX installation.



**⚠WARNING:** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



4510 W. 61st St. North  
Sioux Falls, SD 57107  
[www.dakotadigital.com](http://www.dakotadigital.com)

Phone (605) 332-6513  
Fax (605) 339-4106

[dakotasupport@dakotadigital.com](mailto:dakotasupport@dakotadigital.com) Copyright 2011 - Dakota Digital, Inc.